





**CAR and TRUCK** **FUSE**  
**EASY SPECIFYING**  
**GUIDE**

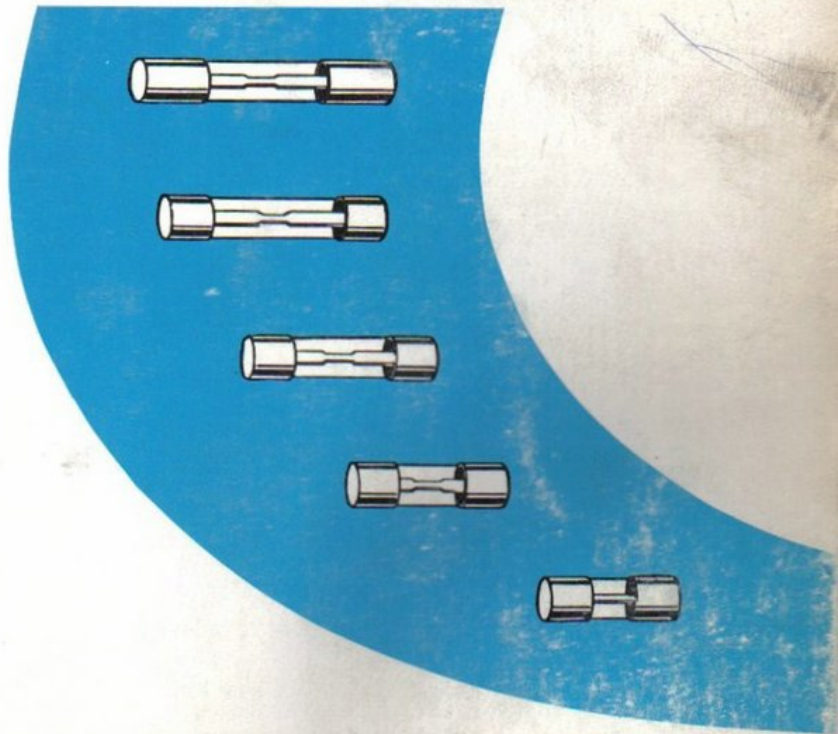


This guide is designed to quickly and accurately specify fuses for Chrysler-built vehicles.  
For fuse application, refer to page 2.

### TYPE "SFE" FUSES

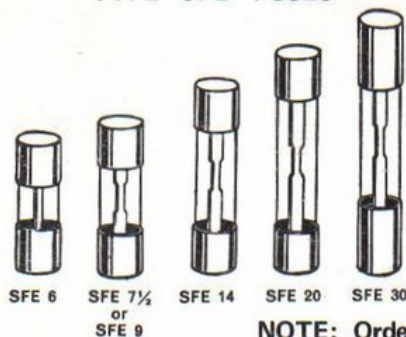

### TYPE "AG" FUSES

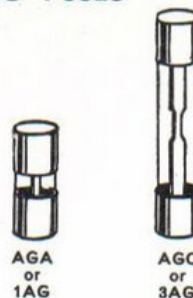

ILLUSTRATIONS ARE  
ACTUAL SIZES  
TO AID  
IDENTIFICATION  
WHEN NECESSARY

NOTE: Order in Unit Pack Multiples of 5 of each number.

TYPE AND AMPS	CHRYSLER PART NO.	MAX. RATED VOLTAGE	LENGTH
SFE 6	147 683	32	3/4
SFE 7-1/2	150 866	32	7/8
SFE 9	147 684	32	7/8
SFE 14	147 685	32	1-1/16
SFE 20	106 653	32	1-1/4
SFE 30	147 686	32	1-7/16
1 AG OR AGA 1	149 559	32	5/8
1 AG OR AGA 2	148 086	32	5/8
1 AG OR AGA 3	445 635	32	5/8
1 AG OR AGA 5	126 049	32	5/8
1 AG OR AGA 10	142 864	32	5/8
1 AG OR AGA 20	106 650	32	5/8
3 AG OR AGC 2	145 511	250	1-1/4
3 AG OR AGC 3	106 652	250	1-1/4
3 AG OR AGC 4	148 511	32	1-1/4
3 AG OR AGC 5	142 630	32	1-1/4
3 AG OR AGC 6	148 369	32	1-1/4
3 AG OR AGC 7-1/2	455 107	32	1-1/4
3 AG OR AGC 10	117 142	32	1-1/4
3 AG OR AGC 15	120 151	32	1-1/4
3 AG OR AGC 30	120 114	32	1-1/4

**Use the right size fuse**—Too small an amperage will blow on ordinary current. Too large an amperage will let too much current flow, which may damage the wiring, radio, or set fire to the entire car.

Sometimes you may encounter cars or trucks that have fuses other than those shown, or located or mounted differently than listed. This is due to the changes made to improve products while in production.

Fuses on accessories may differ from the list in size, location and mounting because they are often installed by Dealers who do not follow the factory specifications.

On some circuits one fuse may protect more than one light or device. In such cases that fuse, its location and mounting are shown after each light or device to make it easier to get the correct fuse information.

Where a fuse is not listed for a model or year it indicates that no fuse is used.

Miscellaneous circuit means circuit for lights or devices not listed.

The important thing to bear in mind is that in replacing fuses, the size and type originally installed should be used.

The letters in the right hand column show—WHERE fuse is located—and HOW it is mounted.

#### 1st letter shows LOCATION of fuse

- D—On Dash (Firewall)—Inside of Car or Cab
- E—Under Hood—On Dash (Firewall)
- G—On or in the Device Protected
- I—Instrument Board—Back of—
- J—Instrument Board—Front of—
- K—Behind Left Kick Panel
- L—Behind Right Kick Panel
- P—In Glove Compartment
- T—In Trunk
- U—Under Hood or in Engine Compartment—(not on Dash or Device)
- W—Inside or on Switch
- X—Under Seat
- Y—On Side Panel—Inside of Cab

#### 2nd letter shows how fuse is MOUNTED

- B—Inside of Box
- C—In Exposed Clips
- E—In Mounted Fuse Holder
- F—In Fuse Holder on Wire
- P—In Panel or Main Fuse Block

#### 100 FUSE ASSORTMENT — 2808 840 CONSISTS OF:

5 - 106 652	FUSE	5 - 145 511	FUSE	5 - 148 369	FUSE
20 - 106 653	FUSE	5 - 147 683	FUSE	5 - 148 511	FUSE
5 - 117 142	FUSE	5 - 147 684	FUSE	5 - 150 366	FUSE
10 - 120 151	FUSE	10 - 147 685	FUSE	5 - 455 107	FUSE
10 - 142 630	FUSE	5 - 148 086	FUSE		

# FUSE EASY SPECIFYING GUIDE

YEAR AND MODELS	FUSE NO.	SYM-BOL*	YEAR AND MODELS	FUSE NO.	SYM-BOL*	YEAR AND MODELS	FUSE NO.	SYM-BOL*
<b>CHRYSLER</b>			Cornering Lights - Contd.			Instrument Lights		
Accessory Fuse			'69 to '72 (See Tail Light)			'62	AGA 2	PP
'64 to '72	SFE 20	IP	or (See Accessory)			'63	AGC 2	IP
Air Conditioner			Courtesy Light			'64	AGC 3	IP
'61	SFE 20	IP	'61, '62, '64 (See Dome Light)	SFE 20	IF	'65	AGC 5	IP
'62	SFE 20	PP	'65			'66 to '68	AGC 4	IP
'63 to '65	SFE 20	IP	'67 & '69 (See Dome Light)			'69 & '70	AGC 3	IP
'66 (See Accessory)			or (See Cigar Lighter)			'71 & '72	AGC 5	IP
'67 to '72 (See Heater)			'71 (See Dome Light)			Key-In Buzzer		
Air Conditioner (Rear)			'72 (See Stop Light)			'70 (See Dome Light)		
'61	SFE 20	IP	Defroster			'72 (See Dual Horn)		
'62	AGA 20	PP	'61 to '64, '67 to '72 (See Heater)			License Plate Light		
'63 to '65	SFE 20	IP	Defroster (Rear)			'62 (See Parking Light)		
'66 & '67 (See Accessory)			'61	SFE 6	IP	'63 to '67 (See Dome Light)		
'69 to '72 (See Accessory)			'62	AGA 10	PP	'68 (See Stop Light)		
Air Conditioner Control			'63 to '65	SFE 20	IP	'69 to '71 (See Tail Light)		
'62	AGA 10	PP	'66, '67, '69 to '72 (See Accessory)			or (See Cigar Lighter)		
'63	SFE 20	IP	Directional Signal			'72 (See Miscellaneous Circuit)		
'64, '67 to '72 (See Accessory)			'69 & '71 (See Emergency Flasher)			Low-Fuel Relay		
Antenna Control			'72 (See Radio)			'70 to '72 (See Accessory)		
'63 to '71 (See Cigar Lighter)			Dome Light			Map Light		
or (See Dome Light)			'61	SFE 6	IP	'61 to '63 (See Dome Light)		
'72 (See Dual Horn)			'62	SFE 9	PP	'65 to '71 (See Cigar Lighter)		
Auto Pilot			'63	AGC 15	IP	or (See Dome Light)		
'61 & '62	AGC 10	IF	'64 to '67	SFE 20	IP	'72 (See Horn)		
'63	SFE 20	IP	'68 (See Cigar Lighter)			Miscellaneous Circuit		
'64 to '67 (See Accessory)			'69 to '71	SFE 20	IP	'72	SFE 20	IP
Back-up Light			'72 (See Stop Light)			Mirror-Matic		
'61	SFE 6	IP	Dual Brake Light			'61 & '62	AGA 2	IF
'62	SFE 6	PP	'72	AGC 5	IP	Parking Light		
'68 to '72 (See Radio)			Dual Horn			'62	SFE 9	PP
Brake Release Light			'72	AGC 5	IP	'63 to '67 (See Dome Light)		
'62	AGA 2	PP	Emergency Flasher			'68 (See Stop Light)		
'63	SFE 20	IP	'65	SFE 14	IF	'69 to '71 (See Tail Light)		
'64 (See Accessory)			'66 & '67	SFE 20	IF	or (See Cigar Lighter)		
'72 (See Stop Light)			'69 & '71	SFE 20	IP	'72 (See Miscellaneous Circuit)		
Cigar Lighter			'72 (See Stop Light)			Reverberator		
'61	SFE 14	IP	Fuel Gauge			'67	SFE 6	IF
'62	SFE 14	PP	'72 (See Radio)			Reverse Gear Indicator		
'63 to '69	SFE 20	IP	Glove Box Light			'69 (See Radio)		
'70 (See Tail Light)			'61 & '62 (See Dome Light)			Radio		
'71	SFE 20	IP	'63 to '71 (See Cigar Lighter)			'61	SFE 7-1/2	IP
or (See Console Cigar Lighter)			or (See Dome Light)			'62	SFE 7-1/2	PP
'72 (See Miscellaneous Circuit)			'72 (See Stop Light)			'63 to '69	AGC 7-1/2	IP
Cigar Lighter (Rear)			Headlight Delay Relay			'70 to '72	SFE 20	IP
'61	AGC 10	IF	'70 (See Accessory)			Seat Belt Warning Light		
'62	SFE 14	KF	'71 & '72	SFE 20	IF	'70 & '71 (See Dome Light)		
'63 & '64	AGC 10	IF	Headlight on Buzzer			'72 (See Brake Light)		
Clock			'70 (See Tail Light)			Side Marker Lights		
'61	AGA 1	IP	'71 (See Cigar Lighter)			'69 to '71 (See Tail Light)		
'62	AGA 2	PP	'72 (See Miscellaneous Circuit)			or (See Cigar Lighter)		
'63, '65 to '71 (See Cigar Lighter)			Headlight Dimmer			'72 (See Miscellaneous Circuit)		
or (See Dome Light)			'67, '69 & '71	SFE 4	IF	Speed Control		
'72 (See Stop Light)			Headlight Sentinel			'69, '71 & '72 (See Accessory)		
Console Cigar Lighter			'70 (See Console Light)			Spot Light		
'66 to '70 (See Console Light)			Heater			'61	SFE 9	WC
'71	SFE 20	IP	'61	SFE 20	IP	'62 to '68	SFE 9	IF
Console Courtesy Light			'62	SFE 20	PP	Stop Light		
'66 & '68	SFE 20	IF	'63 to '72	SFE 20	IP	'62 to '67 (See Dome Light)		
'69 (See Cigar Lighter)			or	SFE 20	IF	'68 to '72	SFE 20	IP
Console Light			Heater (Rcar)			or (See Dome Light)		
'63	AGC 10	IF	'66, '68 to '71 (See Accessory)			Tachometer		
'67 & '69	SFE 20	IF	Hot-Cold Light			'69 (See Accessory)		
'70	SFE 20	IP	'72 (See Dual Brake Light)			Tailgate Lock		
'71 (See Console Cigar Lighter)			Horn Relay			'72	SFE 20	IF
Console Wiring			'72 (See Dual Horn)			Tail Light		
'64	SFE 20	IF	Ignition Delay Relay			'62 (See Parking Light)		
Cornering Lights			'71 (See Dome Light)			'63, '65 to '67 (See Dome Light)		
'67 (See Dome Light)			Ignition Light			'68 (See Stop Light)		
			'72 (See Stop Light)					

\*See cover for explanation of letter symbols.

# FUSE EASY SPECIFYING GUIDE

YEAR AND MODELS	FUSE NO.	SYM-BOL*	YEAR AND MODELS	FUSE NO.	SYM-BOL*	YEAR AND MODELS	FUSE NO.	SYM-BOL*
Tail Light - Contd. '69 to '71 or (See Cigar Lighter) '72 (See Miscellaneous Circuit)	SFE 20	IP	Console Light '63 & '64 '69 & '70 or (See Tail Light) '71 (See Instrument Lights)	AGC 10 SFE 20	LF IP	'72 (See Stop Light) or (See Dome Light) or (See Miscellaneous Circuit)		
Trunk Light '61 to '67 (See Dome Light) '68 (See Cigar Lighter) '69 to '71 (See Dome Light) '72 (See Stop Light)			Console Courtesy Light '66 to '69 or (See Cigar Lighter) '71 (See Console Cigar Lighter) '72	SFE 20	IF	Headlight Buzzer '70 & '71 (See Tail Light) '72 (See Miscellaneous Circuit)		
Voltage Limiter '72 (See Radio)			Console Wiring '64 Model 880	SFE 20	IF	Headlight Delay Relay '70 to '72 or (See Accessory)	SFE 20	IF
Window Lift Relay '72 (See Brake Light)			Cornering Lights '68 (See Stop Light) '69 (See Tail Light) or (See Cigar Lighter) '70 to '72 (See Accessory)	SFE 20	IF	Headlight Dimmer '69	SFE 4	IF
<b>DODGE &amp; DART</b>			Courtesy Light '65	SFE 20	IF	Headlight Washer Relay '71	SFE 20	IF
Accessory Fuse '64 to '72	SFE 20	IP	'67 to '71 (See Dome Light) or (See Cigar Lighter) or (See Tail Light) or (See Emergency Flasher)			Heater '61 (See Defroster) '62 to '72 or	SFE 20	IP
Air Conditioner '61 '62 & '63 '64 to '72 (See Accessory or Heater)	SFE 20 SFE 20	IF IP	'72 (See Stop Light) or (See Dome Light) or (See Miscellaneous Circuit)			Heater (Rear) '69 (See Accessory)	SFE 30	IF
Air Conditioner (Rear) '69 & '72 (See Accessory)			Defroster '61	SFE 20	IF	Horn Relay '72 (See Dual Horn) or (See Tail Light)		
Air Conditioner Control '62	AGA 20	IP	'62 to '72 (See Heater)			Ignition Delay Relay '70 (See Tail Light) '71 (See Emergency Flasher)		
Antenna Control '64 Model 880 (See Cigar Lighter) '69 (See Dome Light)			Defroster (Rear) '61	SFE 7-1/2	IF	Ignition Switch Light '72 (See Stop Light) or (See Dome Light)		
Auto Pilot '63 Model 880	SFE 20	IP	'62	AGA 10	IP	Instrument Lights '62	AGA 2	IP
'64, '67 Model 880 (See Accessory)			'63 & '64 Model 880	SFE 20	IP	'63 to '72	AGA 2	IP
Back-Up Light '62	SFE 6	IP	'65 to '72 (See Accessory) or (See Heater)			or	AGA 3	IP
'68 to '72 (See Radio)			Directional Signal '69 to '71 (See Emergency Flasher) or (See Dome Light) '72 (See Radio)			or	AGA 4	IP
Brake Release Light '62	AGA 2	IP	Dome Light '62	SFE 9	IP	or	AGA 5	IP
'63	AGC 15	IP	'63	AGC 15	IP	Key-In Buzzer '70 & '71 (See Tail Light) or (See Emergency Flasher)		
'63 Model 880	SFE 20	IP	'64 to '67 '68 (See Cigar Lighter) '69 to '71	SFE 20	IP	'72 (See Dual Horn) or (See Tail Light)		
'64, '65 & '69 (See Accessory) '72 (See Miscellaneous Circuit) or (See Tail Light)			or (See Emergency Flasher) '72 (See Stop Light) or			License Plate Light '62 (See Parking Light) '63 to '67 (See Dome Light) '68 (See Stop Light)		
Cigar Lighter '62	SFE 14	IP	Dual Brake Light '72 or	SFE 20	IP	'69 to '71 (See Tail Light) or (See Cigar Lighter)		
'63 to '69	SFE 20	IP	Dual Horn '72 or (See Tail Light)			'72 (See Miscellaneous Circuit) or (See Tail Light)		
'70 & '71 (See Tail Light) or (See Dome Light) or			Electric Deck Lid Solenoid '71 & '72	SFE 20	IF	Low-Fuel Relay '71 (See Accessory)		
'72 (See Miscellaneous Circuit) or (See Dome Light)			Emergency Flasher '65	SFE 20	IP	Map Light '62 & '63 (See Dome Light) '65 to '69 (See Cigar Lighter) or (See Dome Light)		
Cigar Lighter (Rear) '64 Model 880	AGC 10	IF	'66 & '67 or (See Dome Light) '68 (See Stop Light) '69 to '71	SFE 14 SFE 20	IF IF	'70 to '72 (See Tail Light) or (See Stop Light) or (See Miscellaneous Circuit)		
Clock '61	AGA 1	GC	or (See Dome Light) '72 (See Stop Light) or (See Dome Light)			Mirror-Matic '61	AGA 2	IF
'62	AGA 2	IP	Glove Box Light '62 (See Dome Light) '63 to '71 (See Cigar Lighter) or (See Dome Light) or (See Tail Light) or (See Emergency Flasher)			Miscellaneous Circuit '72	SFE 20	IP
'63 to '66 Model 880 (See Cigar Lighter) '68 (See Cigar Lighter) '69 & '70 (See Dome Light) or (See Tail Light) '71 (See Emergency Flasher) '72 (See Stop Light) or (See Tail Light) or (See Dual Horn)						Open Door Indicator '70 (See Dome Light) '71 (See Cigar Lighter)		
Console Cigar Lighter '67, '68, '70 (See Console Courtesy Light) '69 (See Cigar Lighter) '71	SFE 20	IP				Parking Light '62 '63 to '67 (See Dome Light) '68 (See Stop Light) '69 to '71 (See Tail Light) or (See Cigar Lighter)	SFE 9	IP

\*See cover for explanation of letter symbols.

# FUSE EASY SPECIFYING GUIDE

YEAR AND MODELS	FUSE NO.	SYM-BOL*	YEAR AND MODELS	FUSE NO.	SYM-BOL*	YEAR AND MODELS	FUSE NO.	SYM-BOL*
Parking Light — Contd. '72 (See Miscellaneous Circuit) or (See Tail Light)			Air Conditioner — Contd. '64 to '66 (See Accessory) '67 to '72 (See Heater)			Dome Light		
Radio			Air Conditioner (Rear)			'61	SFE 6	IP
'61	SFE 7-1/2	IF	'61 & '63	SFE 20	IP	'62	SFE 9	IP
'62	SFE 7-1/2	IP	'62	AGA 20	IP	'63	AGC 15	IP
'63 & '64	AGC 7-1/2	IP	'64 to '67 (See Accessory)			'64 to '67	SFE 20	IP
'65 to '68	AGC 5	IP	'69 & '70	SFE 20	IF	Door Open Warning Light		
'69	AGC 7-1/2	IP	'71 (See Headlight Washer)			'70 to '72 (See Cigar Lighter)		
'70 to '72	SFE 20	IP	'72	SFE 20	IF	Dual Brake Warning Light		
or	AGC 15	IP	Air Conditioner Control			'69 (See Fuel Relay)		
Reverse Gear Indicator			'62	AGA 10	IP	'71 (See Gauges)		
'69 to '71 (See Radio)			'63	SFE 20	IP	'72 (See Warning Light)		
or (See Back-Up Light)			'64 & '65 (See Accessory)			Dual Horn		
Reverberator			'67 (See Heater)			'72 (See Cigar Lighter)		
'67	SFE 6	IF	'68 (See Accessory)			Electric Fuel Pump		
Seat Belt Warning			'69	SFE 20	IF	'72	SFE 20	IP
'70 (See Tail Light)			'70 to '72 (See Accessory)			Emergency Flasher		
'71 (See Emergency Flasher)			Antenna Control			'65	SFE 14	IF
'72 (See Dual Brake Light)			'64 & '65 (See Cigar Lighter)			'66	SFE 20	IF
Side Marker Lights			'67 (See Battery Accessory)			'67 (See Battery Accessory)		
'68 (See Stop Light)			'68 (See Emergency Flasher)			'68	SFE 20	IP
'69 to '71 (See Tail Light)			'69 (See Cigar Lighter)			'69 & '70 (See Stop Light)		
'72 (See Miscellaneous Circuit) or (See Tail Light)			Auto Pilot			'71	SFE 20	IP
Speed Control			'61 & '62	AGC 10	IF	'72 (See Stop Light)		
'68 to '72 (See Accessory)			'63	SFE 20	IP	Fuel Relay		
Spot Light			'64 to '68 (See Accessory)			'69 & '70	AGC 5	IP
'61 to '68	SFE 9	WC	Back-up Light			Glove Box Light		
or	SFE 9	IF	'61 & '62	SFE 6	IP	'61 & '62 (See Dome Light)		
'70 to '72	AGC 10	IF	'68 to '72 (See Radio)			'63 to '66 (See Cigar Lighter)		
Stop Light			Brake Release Light			'67 (See Battery Accessory)		
'62 to '67 (See Dome Light)			'62	AGA 2	IP	'68 (See Emergency Flasher)		
'68	SFE 20	IP	'63	SFE 20	IP	'69 to '72 (See Cigar Lighter)		
'69 to '71 (See Dome Light)			'64 & '65 (See Accessory)			Gauges		
'72	SFE 20	IP	Battery Accessory Fuse			'66 & '67	AGC 5	IP
or (See Dome Light)			'67	SFE 20	IP	'68	SFE 20	IP
Tachometer			Cigar Lighter			'70 (See Fuel Relay)		
'68 to '72 (See Radio)			'61 & '62	SFE 14	IP	'71	AGC 5	IP
or (See Accessory)			'63, '66, '69 to '72	SFE 20	IP	Headlight Dimmer		
Tail Gate Lock Solenoid			Cigar Lighter (Rear)			'66 to '72	SFE 4	IF
'71 & '72	SFE 20	IF	'64	AGC 10	IF	Headlight On Buzzer		
Tail Light			Clock			'70 to '72 (See Tail Light)		
'62 (See Parking Light)			'61	AGA 1	IP	Headlight Washer		
'63, '65 to '67 (See Dome Light)			'62	AGA 2	IP	'71	SFE 20	IF
'68 (See Stop Light)			'63 to '65 (See Cigar Lighter)			Heater		
'69 to '71	SFE 20	IP	'68 (See Emergency Flasher)			'61 to '72	SFE 20	IP
or (See Cigar Lighter)			'69 to '72 (See Cigar Lighter)			or	SFE 20	IF
'72	SFE 20	IP	Console Wiring			Heater (Rear)		
or (See Miscellaneous Circuit)			'64	SFE 20	IP	'67 (See Accessory)		
Trunk Light			Courtesy Light			'69, '71 & '72		
'62 to '67 (See Dome Light)			'61, '64, '66, '67 (See Dome Light)			(See Air Conditioning — Rear)		
'68 (See Cigar Lighter)			Cornering Lights			Horn Relay		
'69 to '71 (See Dome Light)			'67 (See Dome Light)			'72 (See Cigar Lighter)		
or See Tail Light)			'69 (See Tail Light)			Ignition Delay Relay		
'72 (See Stop Light)			'70 to '72 (See Accessory)			'71 (See Cigar Lighter)		
or (See Dome Light)			Defroster (See Heater)			Ignition Switch Light		
Voltage Limiter			Defroster (Rear)			'68 (See Emergency Flasher)		
'72 (See Radio)			'61	SFE 6	IP	'72 (See Cigar Lighter)		
or (See Accessory)			'62	AGA 10	IP	Instrument Lights		
Window Control Circuit			'63	SFE 20	IP	'62 & '63	AGA 2	IP
'68 (See Accessory)			'64	SFE 20	IF	'64	AGC 4	IP
Window Lift Relay			'65 to '68 (See Accessory)			'65 to '72	AGC 5	IP
'72 (See Dual Brake Light)			'69 (See Air Conditioning — Rear)			Key-In Buzzer		
			'71 (See Headlight Washer)			'70 & '72 (See Cigar Lighter)		
			'72 (See Air Conditioning — Rear)			License Plate Light		
<b>IMPERIAL</b>			Directional Signal			'62 (See Parking Light)		
Accessory Fuse			'69	SFE 20	IP	'63 to '67 (See Dome Light)		
'64, '66 to '68, '70 to '72	SFE 20	IP	'70 (See Accessory)			'69 to '72 (See Tail Light)		
Air Conditioner			'71 (See Emergency Flasher)			Low-Fuel Gauge		
'61 to '63	SFE 20	IP	'72 (See Radio)			'71 (See Gauges)		
						'72 (See Warning Light)		

\*See cover for explanation of letter symbols.

# FUSE EASY SPECIFYING GUIDE

YEAR AND MODELS	FUSE NO.	SYM BOL*	YEAR AND MODELS	FUSE NO.	SYM BOL*	YEAR AND MODELS	FUSE NO.	SYM BOL*
Map Light '61 to '63, '65, '66 (See Dome Light)			Air Conditioner (Rear) '65	SFE 20	IP	Dual Brake Light '72	AGC 5	IP
'67 (See Battery Accessory)			'67 to '70, '72 (See Accessory)			Dual Horn '72	SFE 20	IP
'69 to '72 (See Cigar Lighter)			Air Conditioner Control '62	AGA 20	IP	Electric Deck Lid Solenoid '71 & '72	SFE 20	IF
Mirror-Matic '61 & '62	AGA 2	IF	'64 to '72 (See Accessory)			Emergency Flasher '65	SFE 14	IF
Parking Light '62	SFE 9	IP	Auto Pilot • '67 (See Accessory)			'66 to '69 or (See Dome Light) or (See Cigar Lighter)	SFE 20	IF
'63 to '67 (See Dome Light)			Back-up Light '62	SFE 6	IP	'70 & '71 or (See Dome Light)		
'68 (See Stop Light)			'68 to '72 (See Radio)			'72 (See Stop Light)		
'69 to '72 (See Tail Light)			Brake Release Light '62	AGA 2	IP	Glove Box Light '62 (See Dome Light)		
Radio '61 to '63	SFE 7-1/2	IP	'63	AGC 15	IP	'63 to '69 (See Cigar Lighter)		
'64 to '69	AGC 7-1/2	IP	'64, '65 & '69 (See Accessory)			'70 (See Tail Light)		
'70 to '72	SFE 20	IP	'72 (See Miscellaneous Circuit)			'71 (See Emergency Flasher)		
Reverberator '67 (See Radio)			Cigar Lighter '62	SFE 14	IP	'72 (See Stop Light)		
Seat Belt Warning Light '78 & '71 (See Cigar Lighter)			'63 to '69	SFE 20	IP	Headlight Buzzer '70 & '71 (See Tail Light)		
'72 (See Warning Light)			'70 (See Tail Light)			'72 (See Miscellaneous Circuit)		
Sentry Signal Light '70 (See Fuel Relay)			'71 or (See Dome Light)	SFE 20	IP	Headlight Delay Relay '70 to '72 (See Accessory)		
Side Marker Lights '68 (See Stop Light)			'72 (See Miscellaneous Circuit)			or SFE 20	IF	
'69 to '72 (See Tail Light)			Clock '61	AGA 1	GC	Headlight Washer Relay '71	SFE 20	IF
Signal Sentry '65 to '68	AGC 5	IP	'62	AGA 2	GC	Heater '61 (See Defroster)		
'71 (See Gauges)			'65 & '66 (See Cigar Lighter)			'62 to '72 or SFE 20	IP	
Speed Control '69 (See Directional Signal)			'69 & '70 (See Dome Light)			or SFE 20	IF	
'70 to '72 (See Accessory)			'71 (See Emergency Flasher)			Heater '61 (See Defroster)		
Spot Light '61	SFE 9	WC	'72 (See Stop Light)			'62 to '72 or SFE 20	IP	
'62 to '64, '66 to '68	SFE 9	IF	or (See Dual Horn)			Horn Relay '72 (See Dual Horn)		
Stop Light '62 to '66 (See Dome Light)			Console Cigar Lighter '69 to '71 (See Console Light)			Ignition Switch Delay Relay '71 (See Emergency Flasher)		
'67 (See Battery Accessory)			Console Light '63 & '64	AGC 10	LF	Ignition Switch Light '72 (See Stop Light)		
'68 to '70	SFE 20	IP	.65 (See Instrument Light)			Instrument Lights '62	AGA 2	IP
'71 (See Emergency Flasher)			'69	SFE 20	IP	'63 & '64	AGC 2	IP
'72	SFE 20	IP	Console Courtesy Light '66 to '68	SFE 20	IF	'65 to '70 or AGC 3	IP	
Stereo Tape Player '68 (See Radio)			'70 & '71	SFE 20	IP	'71 & '72	AGC 4	IP
Tail Light '62 & '63 (See Parking Light)			'72	SFE 20	IF	Key-In Buzzer '70 (See Tail Light)	AGC 5	IP
'65 to '67 (See Dome Light)			Cornering Lights '69 (See Cigar Lighter)			or (See Emergency Flasher)		
'68 (See Stop Light)			'70 to '72 (See Accessory)			'72 (See Dual Horn)		
'69 to '72	SFE 20	IP	Courtesy Light '65	SFE 20	IF	License Plate Light '62 (See Parking Light)		
Trunk Light '61, '63 to '67 (See Dome Light)			'67, '69, '70 (See Dome Light)			'63 to '67 (See Dome Light)		
'69 (See Stop Light)			or (See Cigar Lighter)			'68 (See Stop Light)		
'70 to '72 (See Cigar Lighter)			'71 (See Emergency Flasher)			'69 (See Cigar Lighter)		
Warning Lights '72	AGC 5	IP	'72 (See Stop Light)			'70 & '71 (See Tail Light)		
Wheel Slip Control '71 (See Gauges)			or (See Miscellaneous Circuit)			or (See Cigar Lighter)		
Window Control Circuit '68 (See Accessory)			Defroster '61	SFE 20	IF	'72 (See Miscellaneous Circuit)		
Window Lift Relay '72 (See Warning Light)			'62 to '65, '67 to '72 (See Heater)			Low Fuel Relay '71 (See Accessory)		
<b>PLYMOUTH</b>			Defroster (Rear) '61	SFE 7-1/2	IP	Map Light '62 (See Dome Light)		
Accessory Fuse '64 to '72	SFE 20	IP	'62	AGA 10	IF	'65 to '69 (See Cigar Lighter)		
Air Conditioner '62 & '63	SFE 20	IP	'65 to '72 (See Accessory)			'70 & '71 (See Tail Light)		
'64, '65 & '66 (See Accessory)			Directional Signal '69 & '70 (See Emergency Flasher)			or (See Cigar Lighter)		
'67 to '72 (See Heater)			or (See Dome Light)			'72 (See Stop Light)		
			'71 (See Emergency Flasher)			or (See Miscellaneous Circuit)		
			'72 (See Radio)			Mirror-Matic '61	AGA 2	IF
			Dome Light '62	SFE 9	IP	Miscellaneous Circuit '72	SFE 20	IP
			'63	AGC 15	IP			
			'64 to '67	SFE 20	IP			
			'68 (See Cigar Lighter)					
			'69 to '71	SFE 20	IP			
			'72 (See Stop Light)					

\*See cover for explanation of letter symbols.

## FUSE EASY SPECIFYING GUIDE

YEAR AND MODELS	FUSE NO.	SYM BOL*	YEAR AND MODELS	FUSE NO.	SYM BOL*	YEAR AND MODELS	FUSE NO.	SYM BOL*
Open Door Indicator '70 (See Dome Light) '71 (See Cigar Lighter)			<b>VALIANT &amp; LANCER BARRACUDA</b>			Emergency Flasher — Contd. '67 (See Dome Light) '68 (See Stop Light) '69 to '72 (See Dome Light) or or (See Stop Light)		
Parking Light '62	SFE 9	IP	Accessory Fuse '64 to '72	SFE 20	IP	Glove Box Light '63 to '71 (See Cigar Lighter) '72 (See Dome Light) or (See Miscellaneous Circuit)	SFE 20	IP
'63 to '67 (See Dome Light)			Air Conditioner '61 & '63	SFE 20	IP	Headlight Delay Relay '70 & '71 or (See Accessory)	SFE 20	IF
'68 (See Stop Light)			'64 & '66 (See Accessory)			Headlight On Buzzer '70 (See Cigar Lighter)		
'69 (See Cigar Lighter)			'65, '67 to '72 (See Heater)			Heater '61	SFE 20	IF
'70 & '71 (See Tail Light) or (See Cigar Lighter)			Air Conditioner (Rear) '65 (See Accessory)			'62 to '72	SFE 20	IP
'72 (See Miscellaneous Circuit)			Air Conditioner Control '68 to '72 (See Accessory)			Horn Relay '72 (See Tail Light) or (See Dual Horn)		
Radio			Back-up Light '62	SFE 6	IP	Ignition Light '72 (See Dome Light)		
'61	SFE 7-1/2	IF	'68 to '71 (See Radio) or	SFE 20	IP	Ignition Light Relay '72 (See Dome Light)		
'62	SFE 7-1/2	IP	'72 (See Radio)			Instrument Lights '62	AGA 2	IP
'63 & '64	AGC 7-1/2	IP	Brake Release Light '63	AGC 15	IP	'63 to '72 or	AGC 2	IP
'65 to '68	AGC 5	IP	'64, '65 & '69 (See Accessory)			or	AGC 3	IP
'69	AGC 7-1/2	IP	'72 (See Tail Light) or (See Miscellaneous Circuit)			or	AGC 5	IP
'70 to '72	SFE 20	IP	Cigar Lighter '62	SFE 14	IP	Key-In Buzzer '70 & '71 (See Cigar Lighter) '72 (See Tail Light) or (See Dual Horn)		
Reverberator '67	SFE 6	IF	'63 to '71	SFE 20	IP	License Plate Light '62 (See Parking Light) '63 to '67 (See Dome Light) '68 (See Stop Light) '69 to '71 (See Cigar Lighter) '72 (See Tail Light) or (See Miscellaneous Circuit)		
Reverse Gear Indicator '69 & '70 (See Radio) '71 (See Back-up Light)			'72 (See Dome Light) or (See Miscellaneous Circuit)			Map Light '66 to '68, '70, '71 (See Cigar Lighter) '72 (See Dome Light) or (See Miscellaneous Circuit)		
Seat Belt Warning '70 (See Tail Light) '71 (See Emergency Flasher) '72 (See Dual Brake)			Clock '71 (See Emergency Flasher) '72 (See Tail Light) or (See Miscellaneous Circuit)			Miscellaneous Circuit '72	SFE 20	IP
Side Marker Lights '68 (See Stop Light) '70 & '71 (See Tail Light) '72 (See Miscellaneous Circuit)			Console Lights '70 & '71 (See Instrument Lights)	SFE 20	IP	Parking Light '62	SFE 9	IP
Speed Control '68 to '72 (See Accessory)			Console Cigar Lighter '71			'63 to '67 (See Dome Light) '68 (See Stop Light) '69 to '71 (See Cigar Lighter) '72 (See Tail Light) or (See Miscellaneous Circuit)		
Spot Light '61 to '68 '70 to '72	SFE 9 AGC 10	IF IF	Courtesy Light '67 to '72 (See Dome Light) or (See Miscellaneous Circuit)			Radio '61	SFE 7-1/2	IF
Stop Light '62 to '67 (See Dome Light) '68 '69 to '71 (See Dome Light) '72	SFE 20 SFE 20	IP IP	Defroster '61 '62 to '72 (See Heater)	SFE 20	IF	'62 '63 & '64 '65 to '68 '69 '70 to '72 (See Back-up Light) or	SFE 20 SFE 20	IP IP
Tachometer '68 (See Radio) '69 to '71 (See Accessory)			Defroster (Rear) '61 '62	SFE 7-1/2 AGA 10	IF IP	Reverberator '67	SFE 6	IF
Tail Gate Lock Solenoid '71 & '72	SFE 20	IF	'68 to '72 (See Accessory)			Reverse Gear Indicator '69 (See Radio) '70 & '71 (See Back-up Light)		
Tail Light '62 (See Parking Light) '63, '66, '67 (See Dome Light) '68 (See Stop Light) '69 (See Cigar Lighter) '70 & '71 '72 (See Miscellaneous Circuit)	SFE 20	IP	Directional Signal '70 & '71 (See Dome Light) or (See Emergency Flasher) '72 (See Radio)			'72 (See Radio)		
Trunk Light '62 to '67 (See Dome Light) '68 (See Cigar Lighter) '69 & '70 (See Dome Light) '71 (See Dome Light) '72 (See Stop Light) or (See Dome Light)	SFE 20	IP	Dome Light '62 '63 '64 to '67 '68 (See Cigar Lighter) '69 to '72 or (See Stop Light)	SFE 9 AGC 15 SFE 20	IP IP IP			
Voltage Limiter '72 (See Radio) or (See Accessory)			Door Ajar Light '71 (See Dome Light) or (See Stop Light)	SFE 20	IP			
Window Control Circuit '68 (See Accessory)			Dual Brake '72	AGC 3	IP			
Window Lift Relay '72 (See Dual Brake)			Dual Brake Light '72	AGC 5	IP			
			Dual Horn '72 (See Tail Light) or	SFE 20	IP			
			Emergency Flasher '65 '66	SFE 14 SFE 20	IF IP			

\*See cover for explanation of letter symbols.

# FUSE EASY SPECIFYING GUIDE

YEAR AND MODELS	FUSE NO.	SYM BOL*	YEAR AND MODELS	FUSE NO.	SYM BOL*	YEAR AND MODELS	FUSE NO.	SYM BOL*
Seat Belt Light '71 (See Cigar Lighter) '72 (See Dual Brake)			Cargo Light '72 (See Cigar Lighter)			Parking Light - Contd. '68 to '72 or (See Dome Light) or (See Tail Light)	SFE 20	IP
Seat Belt Relay '72 (See Dual Brake)			Cigar Lighter '62 to '64 or '72 or (See Dome Light)	SFE 14 SFE 14 AGC 15 SFE 20	IF IP IF IP	Radio '61 to '72 or or or (See Back-up Light)	SFE 6 SFE 6 AGC 6 AGC 7-1/2	IF IP IP IP
Side Marker Lights '63 (See Stop Light) '70 & '71 (See Cigar Lighter) '72 (See Tail Light)			'65 & '67 (See Emergency Warning System)			School Bus Flashers '71 & '72	SFE 20	IF
Speed Control '71 (See Accessory)			'68 to '72 or or (See Dome Light)	SFE 14 SFE 20	IP IP	Side Marker Lights '69 to '72 (See Tail Light) or (See Parking Light)		
Spot Light '62 to '64, '66 to '68	SFE 9	IF	Clearance Lights '68	SFE 20	IP	Speed Control '71 & '72 (See Accessory)		
Stop Light '62 (See Parking Light) '63 to '67 (See Dome Light) '68 '69 to '72 (See Dome Light) or	SFE 20 SFE 20	IP IP	Defroster '62 to '72 (See Heater)			Spot Light '61 to '67	SFE 9	IF
Tachometer '68 & '71 (See Accessory) or (See Back-up Light) '72 (See Radio)			Directional Signal '62 & '63 '64 to '72 or or	SFE 14 AGC 15 SFE 14 SFE 20	IP IP IP IP	Stop Light '64, '66, '67 (See Dome Light) '68 to '72 (See License Plate Light) or (See Dome Light)		
Tail Light '62 (See Parking Light) '63, '65 to '67 (See Dome Light) '68 (See Stop Light) '69 to '71 (See Cigar Lighter) '72 or (See Miscellaneous Circuit)	SFE 20	IP	Dome Light '74 to '67 '68 to '72	AGC 15 SFE 20	IP IP	Tachometer '72 (See Accessory)		
Trunk Light '69 to '72 (See Dome Light) or (See Stop Light)			Emergency Warning Light '72 (See Stop Light)			Tail Light '64, '66, '67 (See Dome Light) '68 to '72 or (See Dome Light) or (See Parking Light)	SFE 20	IP
Voltage Limiter '72 (See Dual Brake) or (See Accessory)			Emergency Warning System '62 to '70 or or	SFE 14 SFE 14 AGC 15 SFE 20	IP IF IP IP	Trailer Auxiliary '64 to '68 or or as required	AGC 10 AGC 10	IF IP IP
<b>TRUCK - DODGE</b>			Four Way Flasher '69 to '72 (See Cigar Lighter) or or	SFE 20 SFE 14	IP IP	Trailer Lights '61 to '67, '69 to '72 or	AGC 10 SFE 9	IF IP
Accessory Fuse '71 & '72	SFE 20	IP	Fuel Gauge '72 (See Directional Signal)			Warning Buzzer '69 & '70	AGA 2	IP
Air Conditioner '69 to '72 (See Heater)			Fuel Pump '62 to '67, '69 to '72 or or or (See Cigar Lighter)	AGA 6 AGC 6 AGA 6 AGC 6	IP IF IF IP	Windshield Washer '64 to '69	SFE 9	IP
Air Conditioner Control '72 (See Accessory)			Glove Box Light '72 (See Cigar Lighter)					
Alternator Regulator '64 to '67	AGC 6	IP	Heater '62 to '67 or '68 to '72 or or or SFE 14	SFE 20 AGC 20 SFE 20 SFE 14 AGA 20 IP	IP IP IP IF IF			
Auxiliary Fuel Tank '72 (See Accessory)			Horn '62 to '72 or or (See Back-up Light)	AGC 30 SFE 20	IP IP			
Auxiliary Heater '71 & '72 (See Accessory)			Instrument Lights '64 to '72	AGC 2	IP			
Auxiliary Trailer Lights '70 to '72 as required	AGA	IP	License Plate Light '66 & '67 (See Dome Light) '68 to '72 or (See Tail Light) or (See Dome Light)	SFE 20	IP			
Back-up Light '69 to '72 or	AGC 6 SFE 20	IP IP	Low Air Pressure Warning '69	AGA 2	IP			
Body Lights '64 to '67 (See Dome Light) '71 & '72	SFE 20	IP	Oil Temperature Light '71 & '72 (See Buzzer)					
Brake Sentinel '69 to '72 (See Dome Light)			Parking Light '64, '66, '67 (See Dome Light)					
Brake Warning Light '72 (See Directional Signal)								
Buzzer '62 to '68, '71 & '72	AGA 2	IP						
Camper Wiring '70 to '72 or	SFE 20 SFE 20	UF IF						
Cargo Light								

\*See cover for explanation of letter symbols.





**CAR and TRUCK** **FUSE**  
**EASY SPECIFYING**  
**GUIDE**

